## **DMS Series Sensor**



#### **Ordering code for DMS**

M08 (	DMS G - 0 020 - 0 G H E J D
	A05-DMS G - 020
	A06-DMS G - 020
	1 2 3 4 5 6
①Industry code	Blank: General type A05: Manipulator industry A06: Oil resistance and deflection resistance
@ Model	DMS: Solid State Sensor

2 Model		DMS: Solid State Sensor				
③Specif	ications	G H E J[Noet1]				
④Outpu	t type	Blank: 2 wire N: NPN [Noet2] P: PNP				
	Direct lead wire	020: 2m 030: 3m 050: 5m 100: 10m				
⑤Lead wire	Plug connector [Noet3]	M08:0.5m with M8 plug connectorM12:0.5m with M12 plug connectorM08010:1m with M8 plug connectorM12010:1m with M12 plug connectorM08020:2m with M8 plug connectorM12020:2m with M12 plug connectorM08030:3m with M8 plug connectorM12030:3m with M12 plug connector				
6 Additi	onal specification	Blank: General type W:Waterproof type IP68 [note4]				

[Note1]Type J is not available for A06.

[Note2]A05 and A06 have no NPN and PNP option.

[Note3]A05 and A06 have no plug connector option.

[Note4]A05 ,J type and M08, M12 don't have a-w Waterproof option. Standard A06 model already has a waterproof function. Add: The sockets of M08 and M12 need additional order. Please check on page 542.

### **DMS Specifications**

Item		DMS			
Model	2-wire[Note]	2-wire[Note] NPN PNF			
Power supply voltage	10V ~ 28V DC	5V ~ 3	0V DC		
Switching current	2.5mA ~ 100mA	30V/200	mA Max.		
Contact capacity	2.8W Max.	6.0W	Max.		
Current consumption	3mA Max.	3mA Max. 5mA Max.			
Internal voltage drop	3.5V Max.	0.7V	Max.		
Leakage current	0.05mA Max.	0.05mA Max. 0.01mA Max.			
Switching frequency		1000Hz			
Impact resistance		50G			
Circuit protection	Reverse po	larity protection Surge	protection		
Operating Temp.		-10°C ~ 70°C			
Enclosure	DMS,A0	DMS,A05-DMS: IP64 / A06-DMS: IP68			
Standard		CE marking, RoHS			

[Note] A05 \ A06 type has only two-wire type.

# DMS Series Sensor

#### **Compendium of DMS Series**



#### Four types of cross section



# **CMS Series Sensor**



### Ordering code for CMS

M08	CMS G - 020 - 🗆	G Н Е І І
	A05-CMS G - 020 1 2 3 4 5	

①Indust	try code	Blank: General type A05: Manipulator industry		
2 Model		CMS: Reed Sensor		
③Specif	ications	G H E J		
	Direct lead wire	020: 2m 030: 3m 050: 5m 100: 10m		
④Lead wire	Plug connector [Noet1]	M08:0.5m with M8 plug connectorM12:0.5m with M12 plug connectorM08010:1m with M8 plug connectorM12010:1m with M12 plug connectorM08020:2m with M8 plug connectorM12020:2m with M12 plug connectorM08030:3m with M8 plug connectorM12030:3m with M12 plug connector		
⑤Additi	onal specification	Blank: General type H:Heat resistant [note1]		

[Note1]A05 has no plug connector option.

[Note2]A05 has no heat resistant option.

Add: The sockets of M08 and M12 need additional order. Please check on page 542.

#### **CMS Specifications**

Item	C	15			
Model	General	Heat resistant			
Power supply voltage	5V ~ 240	IV AC/DC			
Switching current	100	ImA			
Contact capacity	10W	Max.			
Current consumption	N/A				
Internal voltage drop	2.5V Max. @100mA DC	N/A			
Leakage current	N/A				
Switching frequency	200	)Hz			
Impact resistance	50	)G			
Circuit protection	N,	/A			
Operating Temp.	-10°C ~ 70°C -10°C ~ 125°C				
Enclosure	IP64				
Standard	CE marking, RoHS				

# **CMS Series Sensor**

#### **Compendium of CMS Series**



## **EMS Series Sensor**



#### **Ordering code for EMS**

an 1991	EMS G - 🗆 020- 🗆	
	A05-EMS G - 🗆 020	G 🗍 н 🦳
	A06-EMS G - 020	
	1 2 3 4 5 6	

①Indust	try code	Blank: General type A05: Manipulator industry A06: Oil resistance and deflection resis		deflection resistan	nce			
②Model		EMS: Solid State Sensor						
③Specif	ications	G H						
④Outpu	t type	Blank: 2 wire						
	Direct lead wire		020: 2m	030: 3m	050: 5m	100: 10m		
⑤Lead wire	Plug connector [Noet1]	M08010:1m M08020:2m	with M8 plug c with M8 plug c with M8 plug c with M8 plug c	onnector onnector	M12010: M12020:2	n with M12 plug 1m with M12 plu 2m with M12 plu 3m with M12 plu	g connector g connector	
6 Additi	onal specification	Blank: General type W:Waterproof type IP68 [note2]						

[Note1]A05 and A06 have no plug connector option.

[Note2]A05 and A06 don't have a-w Waterproof option. Standard A06 model has already a waterproof function.

Add: The sockets of M08 and M12 need additional order. Please check on page 542.

#### **EMS Specifications**

Item	EMS		
Model	2-wire		
Power supply voltage	10V ~ 28V DC		
Switching current	2.5mA ~ 100mA		
Contact capacity	2.8W Max.		
Current consumption	3mA Max.		
Internal voltage drop	3.5V Max.		
Leakage current	0.06mA Max.		
Switching frequency	1000Hz		
Impact resistance	50G		
Circuit protection	Reverse polarity protection Surge protection		
Operating Temp.	-10°C ~ 70°C		
Enclosure	EMS,A05-EMS: IP64 / A06-EMS: IP68		
Standard	CE marking, RoHS		
Note	Temperature overheat protection		

# **EMS Series Sensor**

#### **Compendium of EMS Series**



Ordering code for Cylinder accessory





① Category		F:Accessory							
② Model	MQ:Cylinder Accessory								
	Alu	uminum allo	y	Aluminum	n alloy (Thicl	< type)	Stainless steel		
	Code	For series	For bore size	Code	For series	For bore size	Code	For series	For bore size
	A20: Ф20mm		Φ20	A32T: Φ32mm		Ф32	S06: Ф6mm	   	Ф6
	A25: Φ25mm		Φ25	A40T: Φ40mm	TWG	TWG Φ40	S08: Ф8mm		Ф8
	А32: Ф32mm	MCK MBL	Ф32	A50T: Φ50mm		Φ50	S10: Φ10mm		Φ10
	A40: Φ40mm		Φ40				S12: Φ12mm	PB/PBR	Φ12
③Cylinder	A50: Φ50mm		Φ50				S16: Φ16mm	MI	Φ16
	A63: Φ63mm		Ф63				S20: Ф20mm	1	Ф20
	A80: Φ80mm		Ф80				S25: Ф25mm	MG	Φ25
							S32: Ф32mm	MA/MAC	Ф32
							S40: Φ40mm		Ф40
							S50: Ф50mm	1	Φ50
							S63: Ф63mm	   	Ф63

#### Ordering code for NPB series Cylinder accessory



①Category	F:Accessory				
② Model	MQN:NPB Series Cylinder Accessory				
	S5/16: Φ5/16 inch				
	S7/16: Φ7/16 inch				
	S9/16: Φ9/16 inch				
	S3/4: Φ3/4 inch				
	S7/8: Φ7/8 inch				
③Bore size	S1-1/16: Φ1-1/16 inch				
	S1-1/4: Φ1-1/4 inch				
	S1-1/2: Φ1-1/2 inch				
	S1-3/4: Φ1-3/4 inch				
	S2: Φ2 inch				
	S2-1/2: Φ2-1/2 inch				

#### Ordering code for Tie Rod Cylinder accessory



AITAC

① Category	F : Accessory				
② Model	SC:Tie Rod Cylinder Accessory				
	Code	For series	For bore size		
	32		Ф32, Ф40		
	50	SC SGC	Φ50		
© Cullindan	63		Ф63		
③Cylinder	80		Ф80, Ф100		
	125		Φ125		
	160		Φ160, Φ200		
	250		Φ250		
④Attached					

Ordering code for Socket



①Catagory code	F: Accessory											
②Specification code	EC: Connecting Wire											
③Socket type	M08:M8 socket M12:M12 socket											
④ Wire type	B: 2-wire type C:3-wire type											
© Wire length	020: 2 meters	030:3meters	050:5meters	100:10meters								
<b>©Additional specification</b>	Blank: General type											

### **Connection method**





### Dimensions



a number in the []' is the dimension of CMSE(Heat resistant).



#### Socket

#### M8 socket



### Instruction

- 1. Sensor shall not fall down or bear great impact when it is installed.
- 2. The wire of the Sensor shall not move with the action of cylinder.
- 3. Clamping torque shall be within the allowable scope when the Sensor is installed(0.15~0.2Nm).
- 4. Sensor shall be installed in the middle position of the action scope.
- 5. Sensor wiring:
  - A. The wire is unable to bear repetitive torsion and tension. Please wire an external load before switch the power on.
  - B. No poor insulation in wire.
  - C. Do not wire with power line, high voltage line or use one wiring pipe.
  - **D.** Pleas wire the circuit correctly base on the circuit diagram.
- 6. Execute scheduled maintenance by the following guidelines:
  - A. Make sure the sensor is firmly fixed.
  - **B.** Make sure the wire is intact.
  - C. Make sure that LED indicate the movement of cylinder correctly.
- 7. Application of environment:
  - **A.** It is Not allow to use the sensor in the environment with explosive gas.
  - B. Magnetic sensor shall not be used in the environment with external magnetism.
  - C. Magnetic sensor shall not be used in the environment that is always eroded by water.
  - **D.** Magnetic sensor shall not be used in the environment with oil moisture or chemical substance.
  - E. Magnetic sensor shall not be used in the environment with periodically changing temperature.
  - F. Magnetic sensor shall not be used in the environment with excessively great impact.
  - G. Magnetic sensor shall not be used in the environment with sources of electrical pulse.
  - H. Avoid the environment with accumulated iron power and dense magnetic objects.

## Sensor

AITAC

# DMS、CMS、EMS Series

1-1/2 2 2-1/2 3-1/4 4 5 16 20 25 32 40 16 20 25   Image: CMSG EMSG Image: CMSG	DMSG	CMSG	EMSG	G NSU											НЕКР										Н	IFK	L						
MSG CMSG EMSG NPB   5/16 7/16 9/16 3/4 7/8 1-1/16 1-1/4 1-1/2 2 2-1/2   0 0 0 0 0 0 0 0 0   10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16				1-	1/2	2	2	-1/2	2 3-	1/4	4		5		16	2	20	2!	5	32		40		16		20		25					
5/16 7/16 9/16 3/4 7/8 1-1/16 1-1/2 1-3/4 2 2-1/2   •				(	D	•		•		•		•	•		•				)	•		•		•		•		•	_				
Image: Normal and the second of the secon	MSG	CMSG	EMSG										NPB																_				
It needs an accessory to mount a sensor on a cylinder   It				5/	16	7/16	5 9	9/16	3	/4	7/3	8 1	-1/1	6 1	-1/4	1-1	L/2	1-3,	/4	2	2	2-1/	2										
MSG CMSG EMSG HFK TCL\TCM HFZ HFY HFZ HFY HFY HFZ HFY	<u>م</u>	L	el.			•		•		•	•		•		•			•		•		•											
10 16 20 25 32 40 6 10 12 16 20 25 32 40 50 63 80 100 6 10 16 20 25 32 40 50 63 80 100 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40 6 10 16 20 25 32 40							It	neec	ls an	acc	esso	ry to	o mou	int a	a sen:	sor o	n a d	cylin	der														
M = M = M = M = M = M = M = M = M = M =	MSG	CMSG	EMSG		ŀ	IFK							TCL	.\т	СМ							I	HFZ						H	FY			
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $			:	10 1	.6 20	0 25	32	40	6	10	12	16	20 2!	5 3	2 40	50	63	80	100	6	10	16	20	25	32	40	6	10	16	20	25	32	
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $				•				$\bullet$					•					ullet								ullet					ullet		
$ \begin{tabular}{ c c c c c c c c c c c c c c c c c c c$	1 M		٦ L			TR				F	МТ				RI	MTL				H	IFP	•											
6 10 6 10 16 20 25 32 40 6 32 10 16 20 25 32 40 50 63 10 16 20 25 32 16 20 25 32 40 50 63 10 16 20 25 32 16 20 25 32 40 50 63 10 16 20 25 32 16 20 25 32 40 50 63 10 16 20 25 32 16 20 25 32 40 50 63 10 16 20 25 32 40 6 40<	- -	ſ		6 1	.0 16	6 20	25	32	16	20	25	32	40 10	0 1	6 20	25	32	40	10	16	20	25	32										
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $				•				$\bullet$					• •					$\bullet$		$\bullet$			ullet										
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $																																	
• •	MSH	CMSH	EMSH				-							_	HFY																		_
HLQ\HLQL HLS\HLSL HLH   20 25 32 40 6 8 12 16 20 25 6 8 12 16 20 25 6 8 12 16 20 25 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 0 0 <td></td> <td></td> <td></td> <td></td> <td></td> <td>6</td> <td>10</td> <td>6</td> <td>10</td> <td>16</td> <td>20</td> <td>25</td> <td>32 4</td> <td>0</td> <td>6</td> <td></td> <td></td> <td>10</td> <td>16</td> <td>20</td> <td>25</td> <td>32</td> <td>16</td> <td>20</td> <td>25</td> <td>32</td> <td>40</td> <td>50</td> <td>63</td> <td>10</td> <td>16</td> <td>20</td> <td>25</td>						6	10	6	10	16	20	25	32 4	0	6			10	16	20	25	32	16	20	25	32	40	50	63	10	16	20	25
20 25 32 40 6 8 12 16 20 25 6 8 12 16 20 25 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 10 16 20 6 8 10 12 16 20 6 10 16 20 6 8 10 12 16 20 6 10 16 20 6 8 10 12 16 20 6 10 16 20 6 8 10 12 16 20 6 10 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 6 8 10 12 16 20 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>•</td><td></td><td></td><td>•</td><td></td><td>•</td><td>•</td><td></td><td>•</td><td></td><td>•</td><td>•</td><td>•</td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td><td></td><td></td><td></td><td></td><td>•</td><td>•</td></t<>							•			•		•	•		•		•	•	•		•	•	•	•	•	•	•					•	•
HRQ HFK RMH HRS		~						-	I I					-		-																	
HRQ HFK RMH HRS				20 2	:5 3	2 40	6	8	12	16	20	25	6 8	3 1	2 16	5 20	25	6	8	10	12	16	20	6	10	16	20	6	8	10	12	16	
HRQ HFK RMH HRS	ATTAL	man		•					•	•		•	•					•	•		•	•	•	•	•	•	•		•	•	•	•	
			-				1	-						_						1 1													
	<u>_</u>	(					120	20		70	1002	00	10 10	612	0 2	5 32	40	10	16	20	25	10	15	20	30	40							

DMSH CMSH EMSH				NAC	CF			NACQ													
	9/16	3/4	1-1/16	1-1/2	2	2-1/2	3	4	12	16	20	25	32	40	50	63	80	100			
			HFD					HF	КР						HFCQ						
10 Sugar	8	12	16	20	25	10	16	20	25	32	40	16	20	25	32	40	50	63			
All late my name																					
		Н	FKL			н	GS														
$\bigcirc$	10	16	20	25	6	8	10	12													

#### How to selection

AITAC

### How to mounting



How to mounting

Airtac

